



# CONTROL UNIT USE & INSTALATION GUIDE



## ELECTRIC CONNECTIONS

- Connect the black wire to a valid ground
- Connect the wire Red / Black to a positive ignition (+15/54) the presence of the sub-panel disables all commands
- Connect the red wire to a permanent positive 12vcc. We recommend fitting a 10A fuse
- The Brown wire negative input for opening control
- The wire White / Black negative input to disable the radio
- The wires Grey / Red and Purple / Red must be connected to ground
- The wires Grey / Yellow and Purple / Yellow must be connected a +12
- Connect the wires Yellow to direction indicators

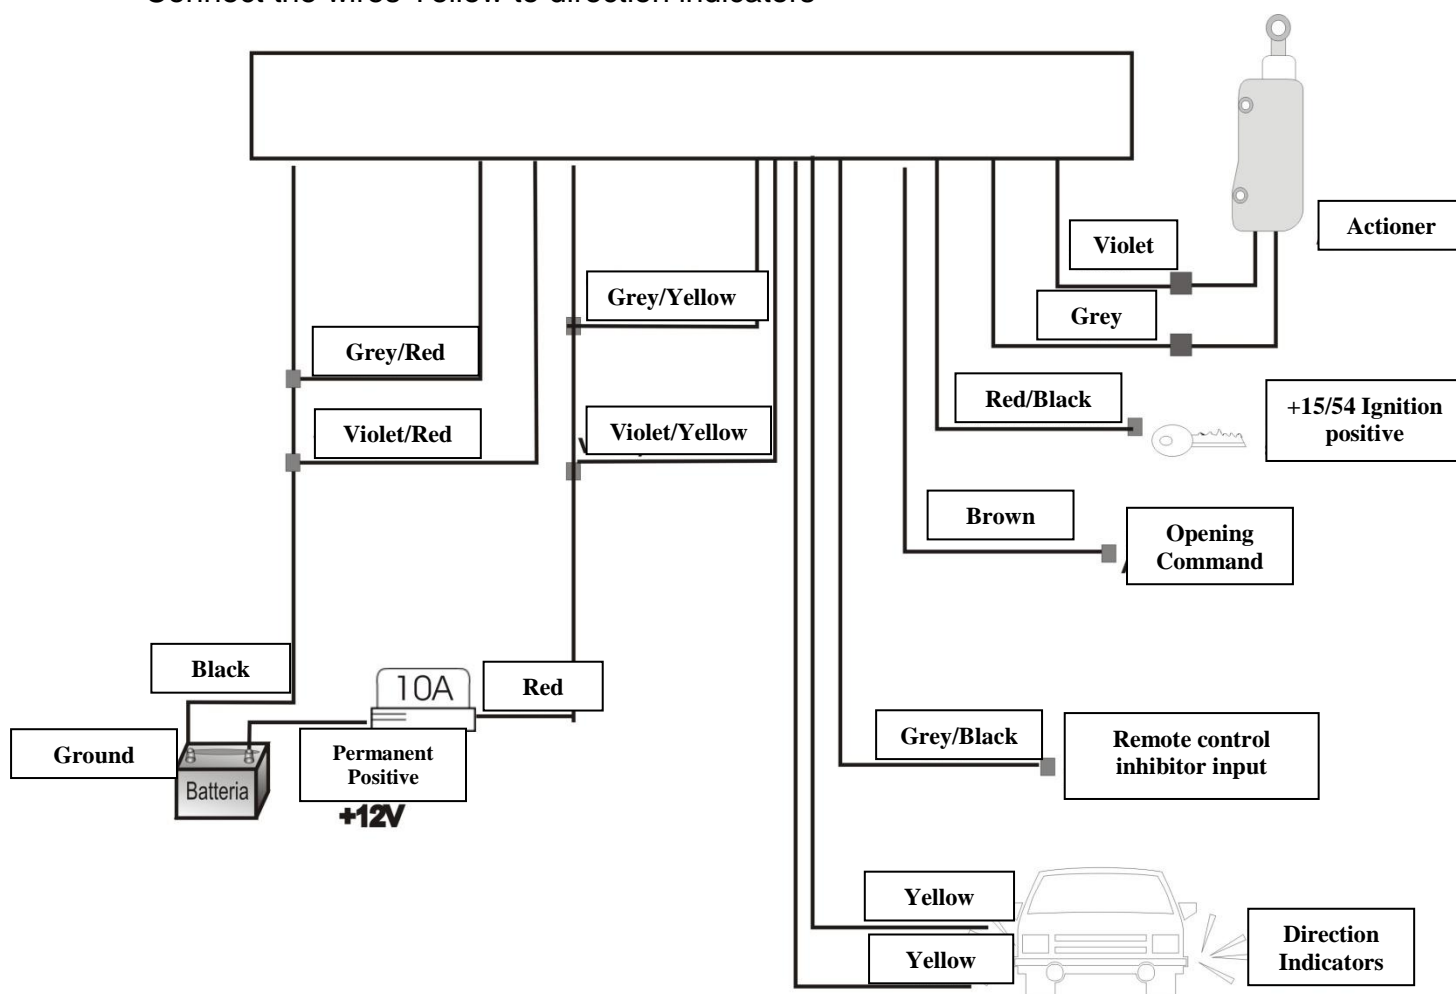

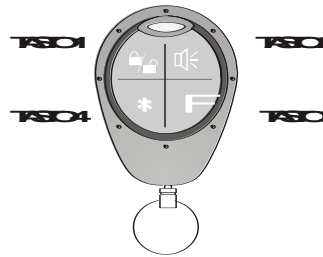

## REMOTE CONTROL

### FUNCTION

Botton 1	Botton 2
Botton 4	Botton 3

Pressing the remote control button 1 activates the opening and the arrows will flash to indicate the opening, after 10 seconds activates the automatic closing.

### SETTING THE REMOTE CONTROL

- Disconnect the control unit connector
- Turn the ignition
- Reconnect the connector of the control unit
- Press 3-4 times the remote control button 1
- Switch off the ignition
- Try pressing the button 1 to close and open

Memorized the fifth remote control, if you proceed further storing a sixth device, the first stored code will be overwritten.

### TECNICAL FEATURES

Contact capacity relay locks centralized / na nc 10A 15A

Maximum absorption system is disarmed / 8 mA

Voltage / 8V-16V



FULL NAME .....	
certify that he personally performed the installation of the system described below, in accordance with the instruction from the manufacturer.	
VEHICLE INFO: Brand:.....Model:.....	
Type: .....	
LICENSE PLATE N°:.....	
SYSTEM DESCRIPTION:	
BRAND:.....TYPE:.....	
INSTALLER STAMP	INSTALLER SIGN .....
	INSTALLATION DATE .....

**WARRANTY**

The guarantee is valid for 36 months from date of manufacture, for the parts considered defective at the discretion of the manufacturer. Are excluded from this form of cover external labor costs and all other costs of any strength. The equipment to be repaired under warranty must be sent postage paid or to be delivered through their local dealer to our factory. Are excluded from the warranty parts subject to normal wear. The warranty will be considered expired in case of damage caused by incorrect installation, alterations, modifications and repairs carried out by unauthorized personnel. The manufacturer, in order to improve the product, reserves the right to make changes in the circumstances, places and times that best deems appropriate. Disclaims any liability for any faults or damage to the module, to accessories and / or to the electrical system of the vehicle due to incorrect installation or to the technical characteristics of electronic components, electrical, mechanical. Excluding compensation for direct or indirect damages of any kind to persons and / or property due to improper use of the module, not for regular operation thereof, or for the suspension of use and service due to repair.

Hereby, we declare that the products / transmitters model 4key complies with the R & tte 5/99. The technical file is stored at our office.

--