

Front Left and right, place Square Neck Bolt and plate inside hole (NR 11+16)




Back Left and Right, place Square Neck Bolt and plate inside hole (NR 11+16)



Place the right bracket on the Bolt and tighten with nut (NR 15)

Mount the support brackets with bold and nut (NR 17+15), and connect them to the body of the car

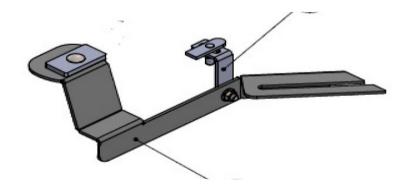

Remove cap and place





Middle brackets,



For the middle brackets, remove 2 caps an place boldplates and connect the bracket.

You can use any place/hole , we prefer to devide the forces.