

Installation manual

 Side bars Serie: GM, GC, RM, RC, BM, BC

Mercedes Sprinter 2018+ Front wheel drive



SW13 (23 Nm)




SW17 (46 Nm)



45 Min.

Version: November 2018



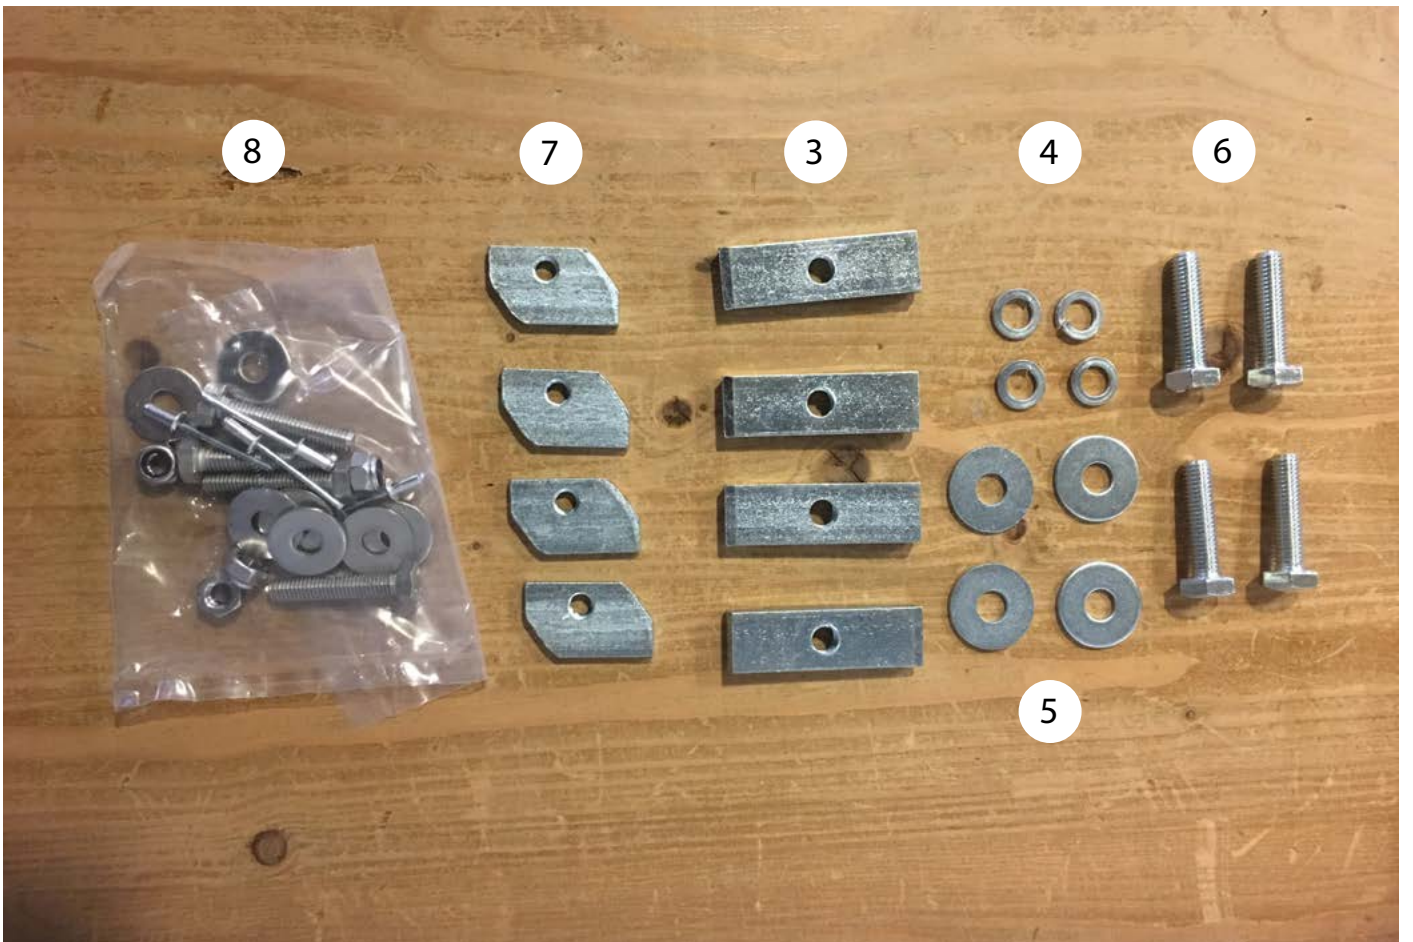

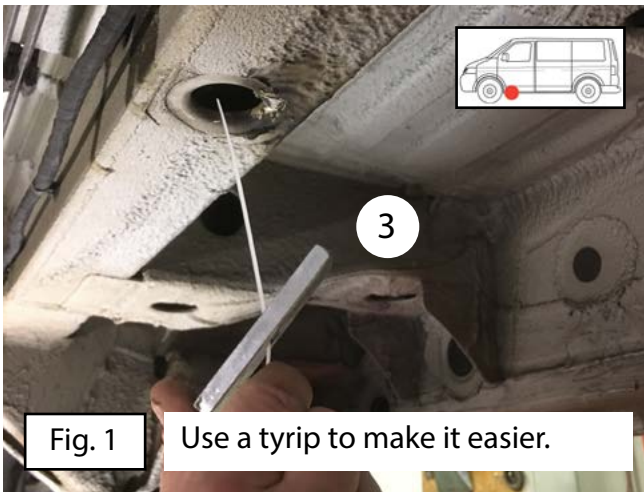


Fig. 1 Use a tyrip to make it easier.

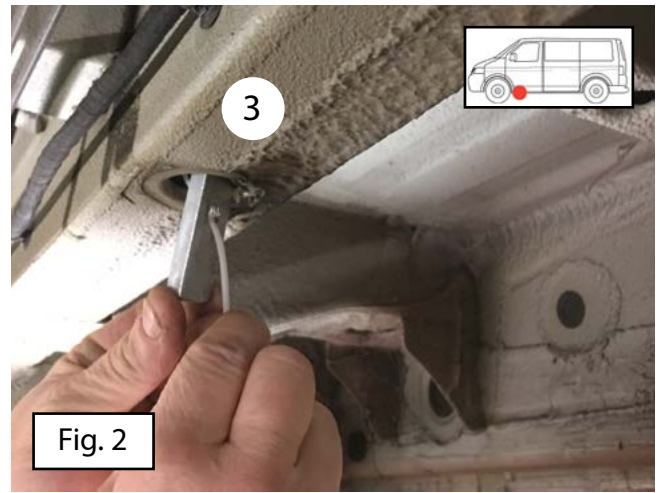


Fig. 2

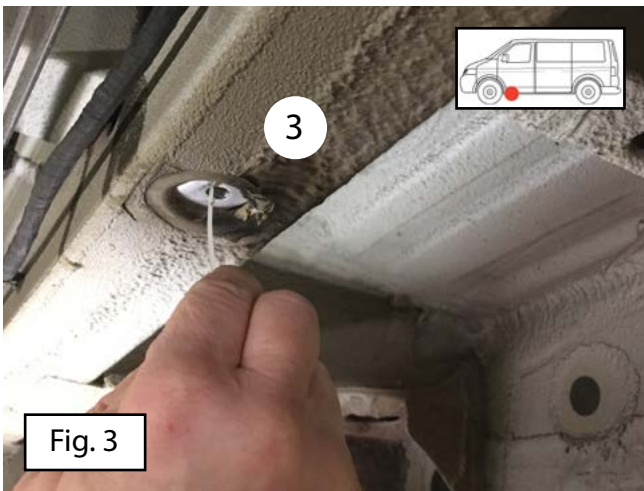


Fig. 3

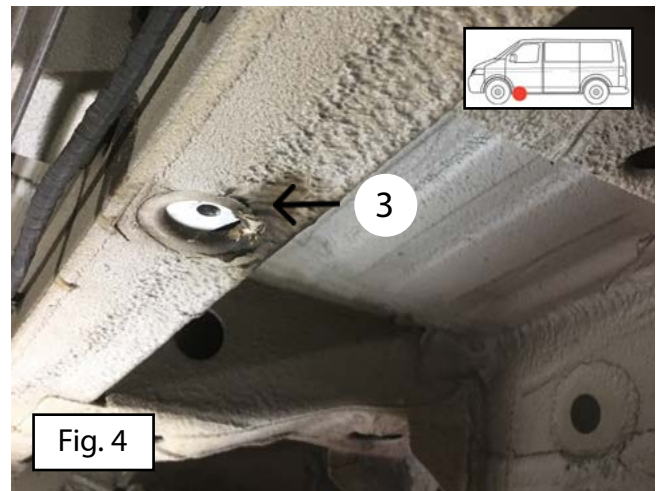


Fig. 4

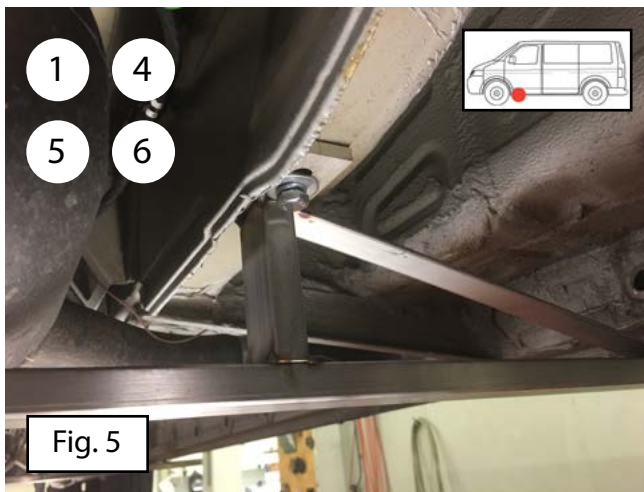


Fig. 5

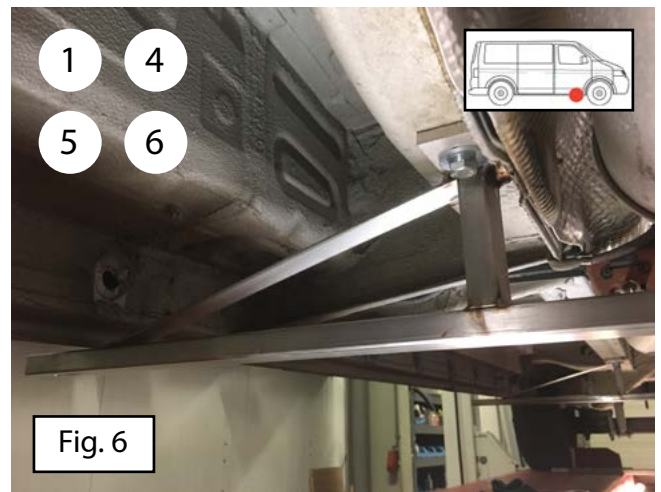


Fig. 6

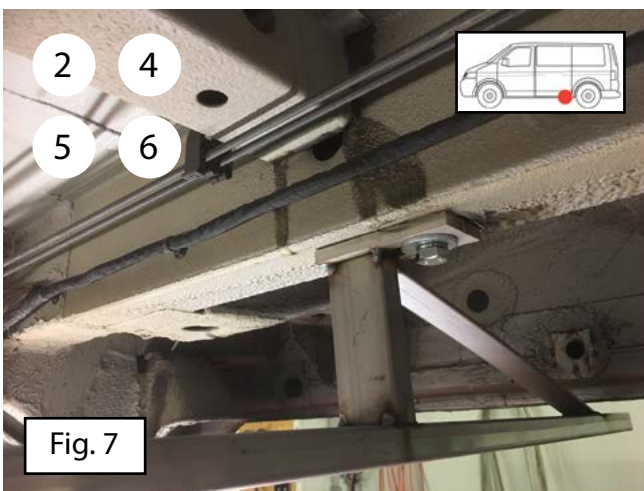


Fig. 7






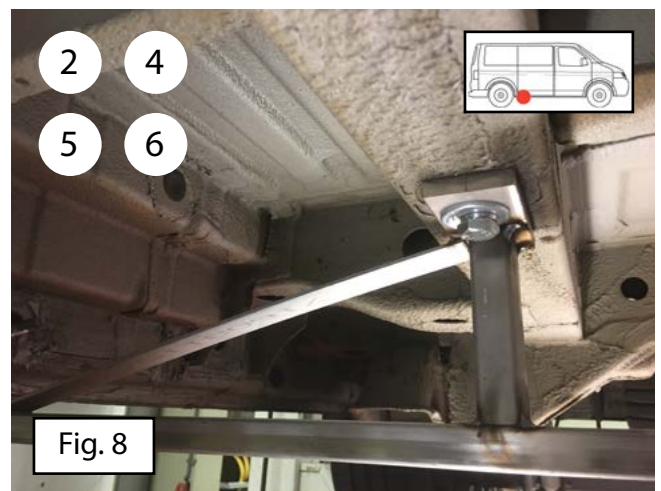


Fig. 8

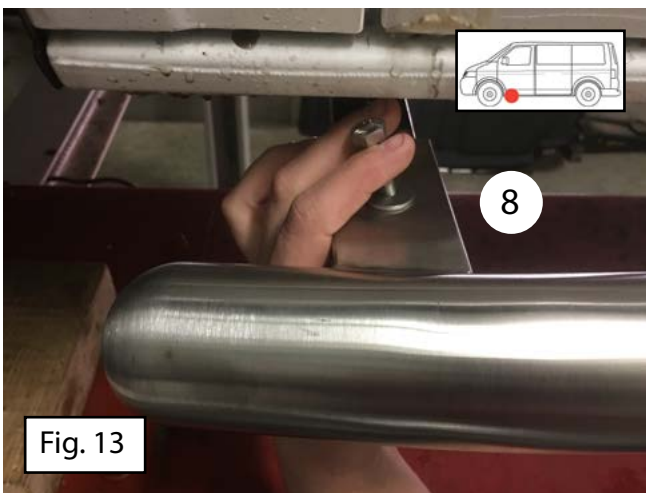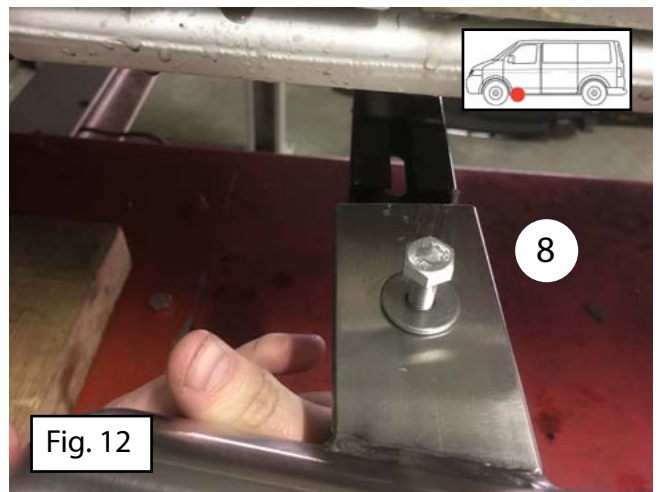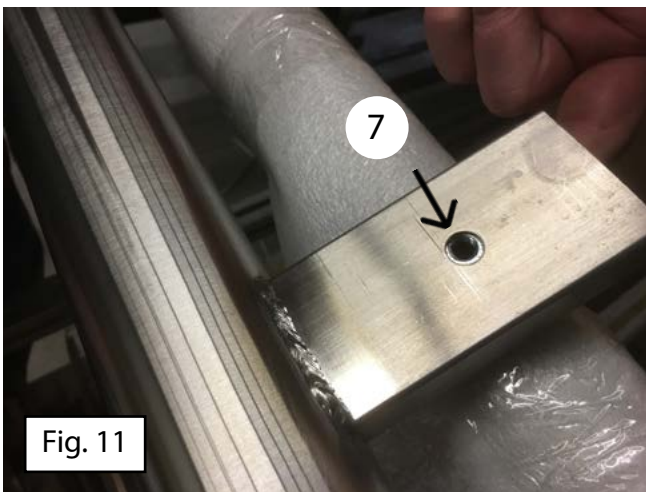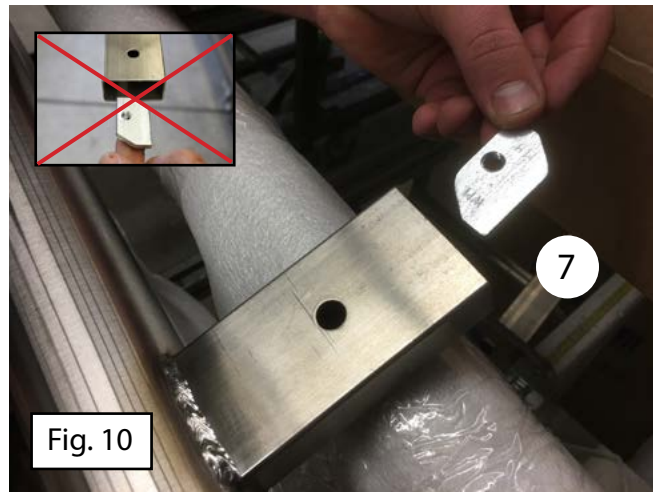

Enjoy the end result!

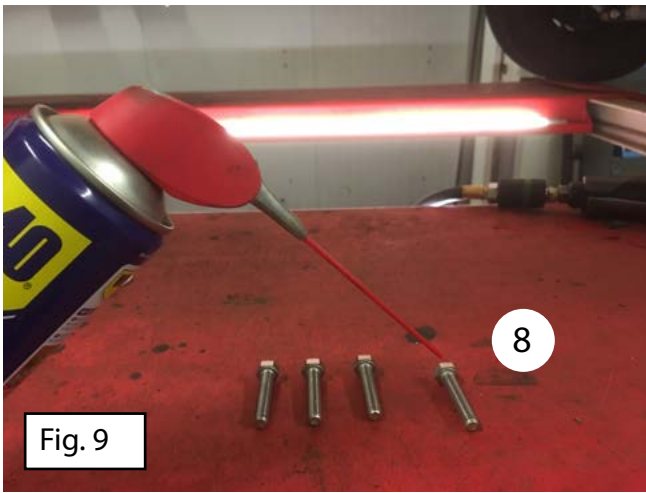

Matching accessories

